Dashcam Installation Guide



Models: KDC507

IMPORTANT: Please read these instructions before installing and operating the unit. Retain them for future reference.

Safety Precautions

- Follow the instructions in this guide and carefully and if you unsure of any step, stop installation immediately and contact Kasava for support.
- Only install this product into vehicles operating on a 12V or 24V battery.
- Ensure the camera(s) is/are positioned as to not limit the drivers' field-of-view.
- Ensure all cabling is securely fitted with no risk of interference with driving of the vehicle.
- Do not expose this product to water or other liquids.

What's in the Box



KDC507 Dual-facing Camera



GPS Antenna




Power Supply

Optional additions



Micro SD Card

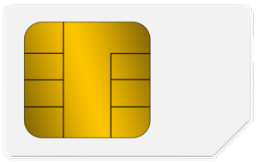


Micro SIM Card

Installation

IMPORTANT: The ideal cable running routes can vary from vehicle-to-vehicle. The below instructions will suit most vehicles, however, Kasava provide additional cable clips and cable ties if you require them. If you unsure of any aspect of installation or require any assistance, please contact customercare@kasava.io

Wiring Diagram

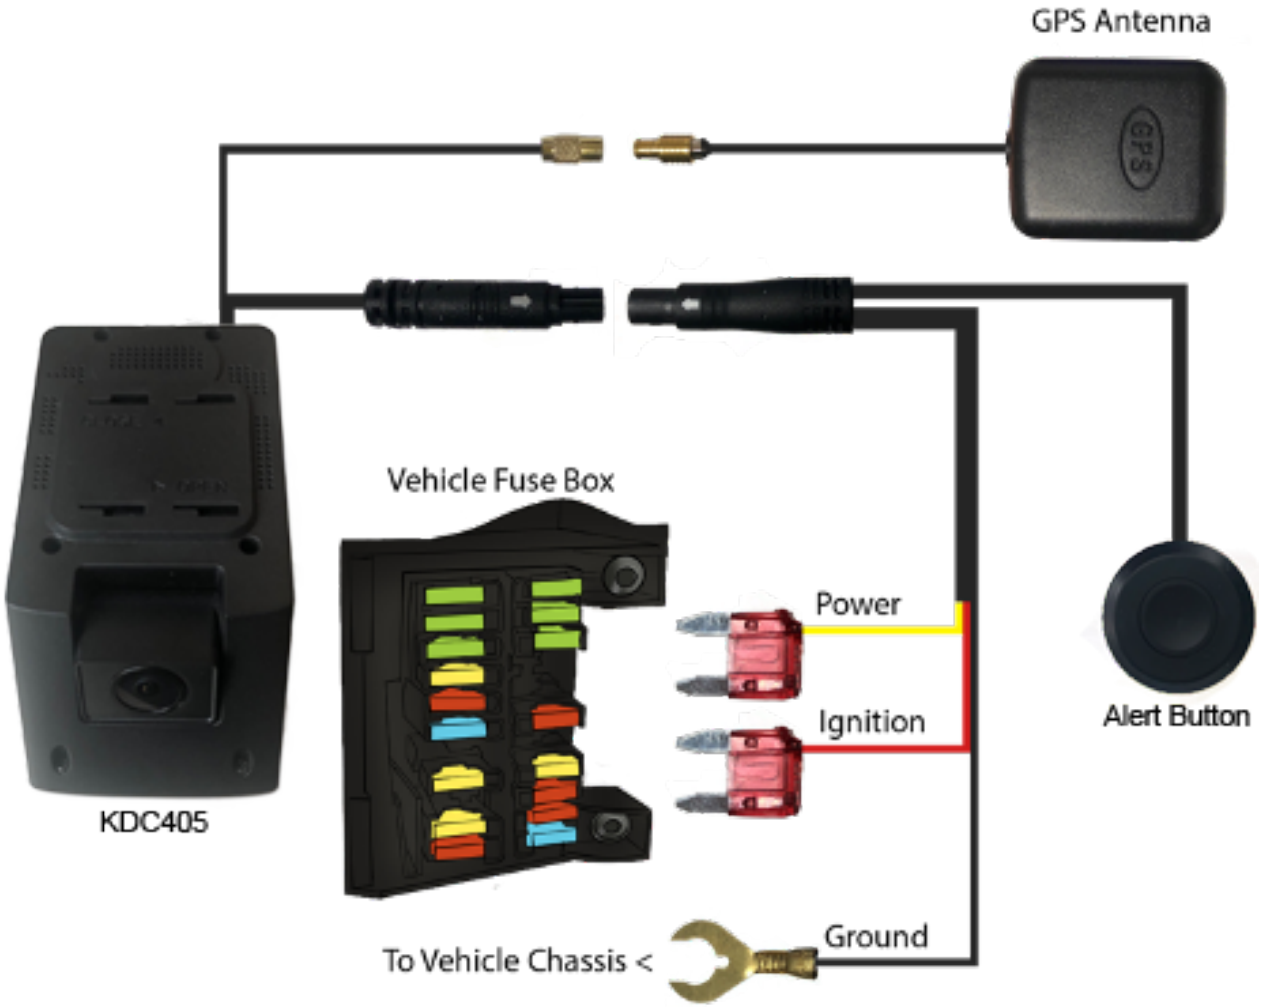


1) If screw plate cover is fitted, SIM and SD cards have been pre-installed by Kasava and you can skip to step 2. Otherwise, insert Micro SIM Card using the SIM tray provided and Micro SD Card into the KDC507. Screw the cover over the cards using the screws provided.

2) Select the position for the forward-facing camera to be fitted to the windscreen. The camera will ideally be positioned central and ensuring the in-cabin camera is not blocked.

3) Ensure the windscreen glass is clean and dry at the position the forward-facing camera will be positioned. Remove the plastic film from the adhesive pad and stick the camera to the windscreen, ensuring it is positioned level.

4) Remove the KDC507 from its bracket by sliding it to the right. Remove the plastic film from the adhesive pad of the lockable bracket and stick to the windscreen around the bracket already fitted.

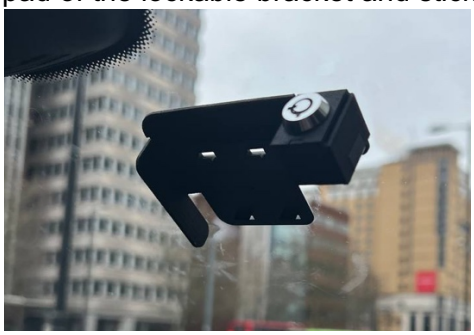


5) Re-fit the camera and lock into place. Rotate the forward-facing camera position to point slightly downwards the road. Rotate the in-cabin camera to face into the vehicle.



6) Ensure the windscreen glass is clean and dry at the top corner of the passenger side of the vehicle. Remove the plastic film from the adhesive pad of the GPS antenna and stick to the windscreen as shown.

7) Connect the GPS antenna to the forward-facing camera and tuck the cabling into the ceiling fabric.

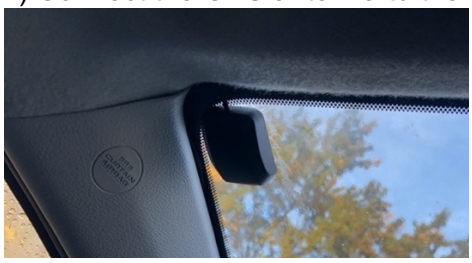

8) Locate your vehicles fuse box It is usually located on the driver side, below the steering wheel. Connect the powers supply to the forward-facing camera and run the cabling along the ceiling fabric.



9) Open the vehicle door and tuck the cabling under the door seal, running the cabling down towards the vehicles Fuse Box.



10)

- Connect the “yellow cable (+)” to a fuse. It must be connected to a fuse that has power at all times.
- Connect the “red cable (+)” to a fuse. It must be connected to a fuse that has power only when you start the engine.
- Connect the ground cable to the car body or battery negative.

11) Using the adhesive pad provided, mount the ‘Alert’ button in a position that is easy to reach position for the driver.



Finishing Up

Run a health check to confirm successful installation. See ‘Heath Check Guide’ for details.

Start your vehicle ignition and wait for your camera to begin recording.

Name	KDC507
Booting	Solid red LED
Not recording (sleep mode)	Solid green LED
Recording	Pulsing red LED

Help and Support

Kasava is here to assist with all aspects of camera operation and installation. If you require any assistance or have any queries regarding Kasava products, please contact us at custercare@kasava.io